




## Washing machine

**Use:**

1. Open the door
2. Put the laundry in the machine
3. Close the door and check if there are no clothes between the door.
4. Choose the right program and temperature
5. Push the on-button: The control light will burn.
6. When the program has finished the control light 'Einde' will burn.

**Attention:**

Don't putt dark, white and coloured laundry together in the machine (maximal 5 kilogram)

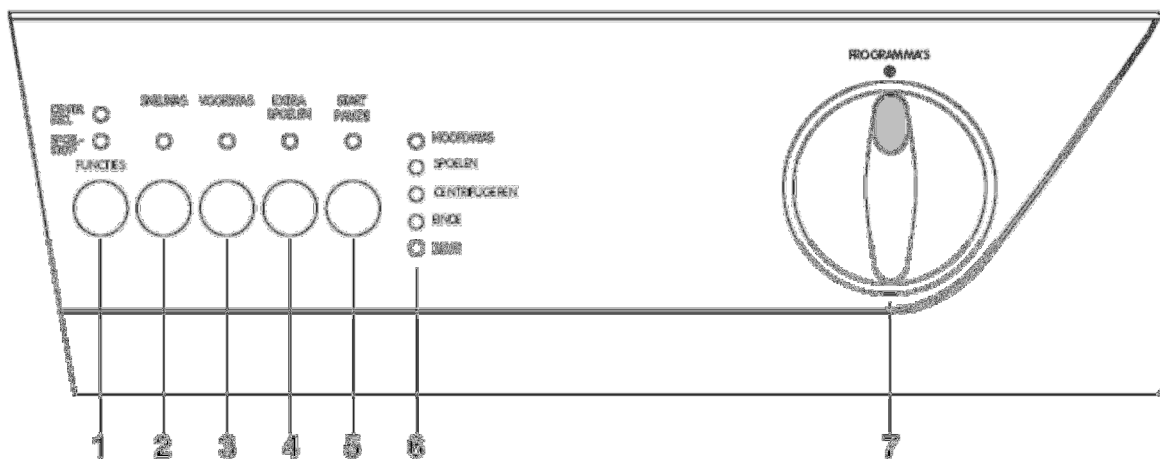


## Control Panel

1. Option Button
2. Fast wash
3. Prewash
4. Super Rinze
5. Start Pause
6. Program progress display
7. Program selector dial