




Dishwasher

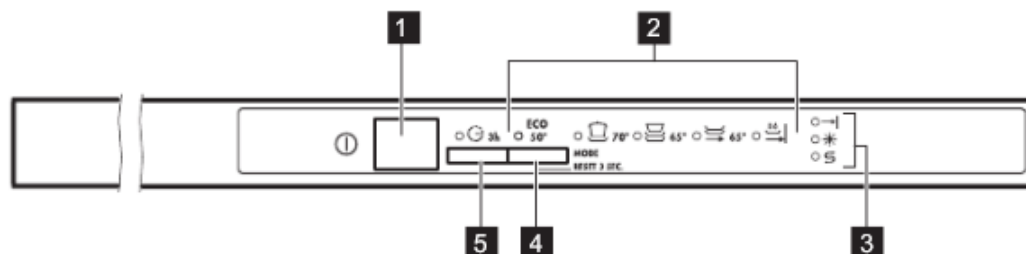

Controle panel

1. On / Off button
2. Program indicator
3. Control indicator
4. Program button
5. Delay button

Manual

1. Press the on/off button.
2. Load the dishes in the upper and lower basket.
3. Add detergent.
4. Press the program button to choose the right cycle. Close the door, the dishwasher will automatically start with the program.