




Dishwasher

- ✓ Open the door and fill the detergent dispenser in the large compartment. Don't use hand soap!
- ✓ Load the dishwasher. Make sure the crockery does not obstruct the rotating arms.
- ✓ Close the dishwasher door.
- ✓ Select a programme and press the Start button.
- ✓ At the end of the programme the lights on the dishwasher will turn off. Now you can unload the appliance.

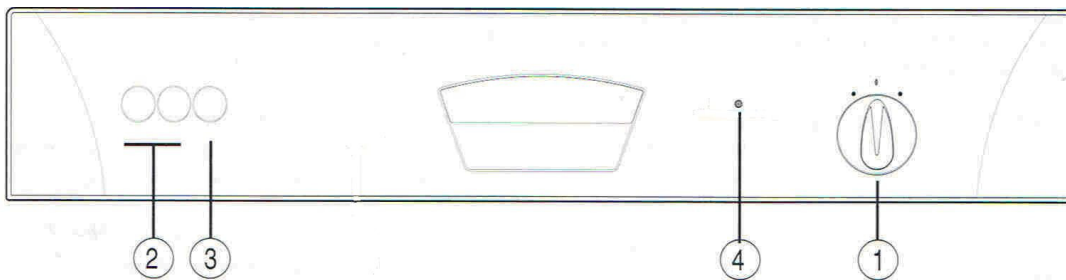

Controle Panel

1. Programming knob
2. Program buttons
3. Start button
4. Indicator light