


Dishwasher

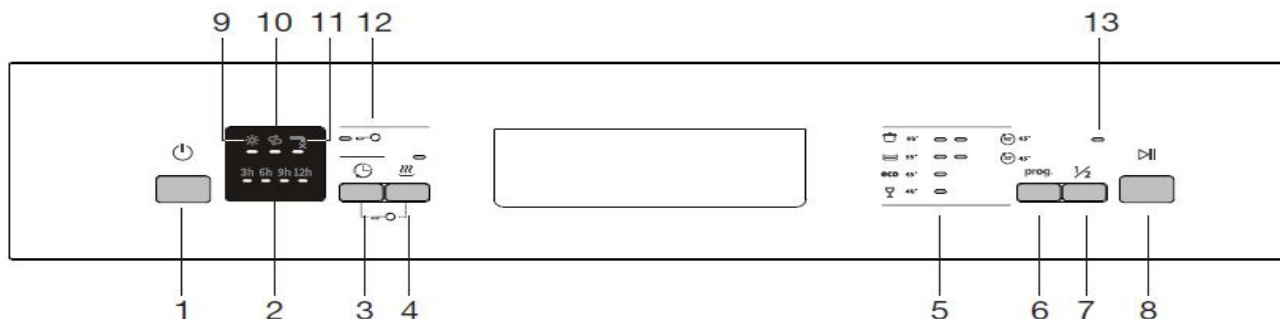

Control Panel

1. On/Off button
2. Delay indicator (3/6/9/12 hours)
3. Delay button
4. Extra drying function button
5. Program indicator
6. Program button
7. Half load button
8. Start/pauze button
9. Rinse ais warning indicator
10. Water softener indicator
11. Water faucer indicator
12. Child lock indicator
13. Half load indicator

Manual

1. Press the on/off button.
2. Load the dishes in the upper and lower basket.
3. Add detergent.
4. Press the program button to choose the right cycle. Close the door, the dishwasher will automatically start with the program.