




Dishwasher

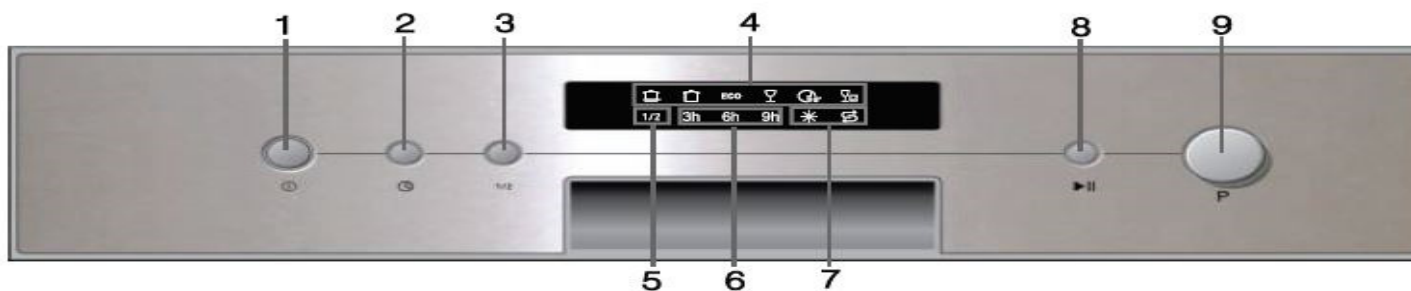

Controle panel

1. On/Off button
2. Delayed start button
3. 'Half load' button
4. 'Selected cycle' indicators
5. 'Half load' indicators
6. 'Delayed start' indicator
7. Water softener and rinse agent indicators
8. Start/reset button
9. Program knob

Manual

1. Press the on/off button.
2. Load the dishes in the upper and lower basket.
3. Add detergent.
4. Press the program button to choose the right cycle. Close the
5. Press the Start/reset button. The program will start.