




## Dishwasher

- ✓ Open the door and fill the detergent dispenser in the large compartment. Don't use hand soap!
- ✓ Load the dishwasher. Make sure the crockery does not obstruct the rotating arms
- ✓ Close the dishwasher door.
- ✓ Select a programme and press the Start button
- ✓ At the end of the programme the lights on the dishwasher will turn off. Now you can unload the appliance.

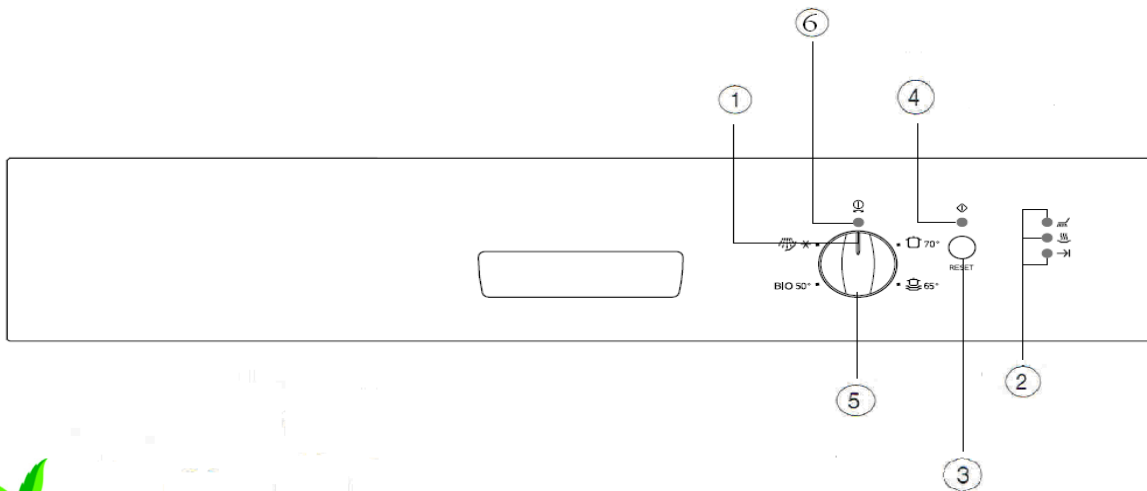


## Controle Panel

1. Programme indicator
2. Control light
3. Start/cancel button
4. Light start/cancel
5. Programme button
6. "On" light