




## Dishwasher

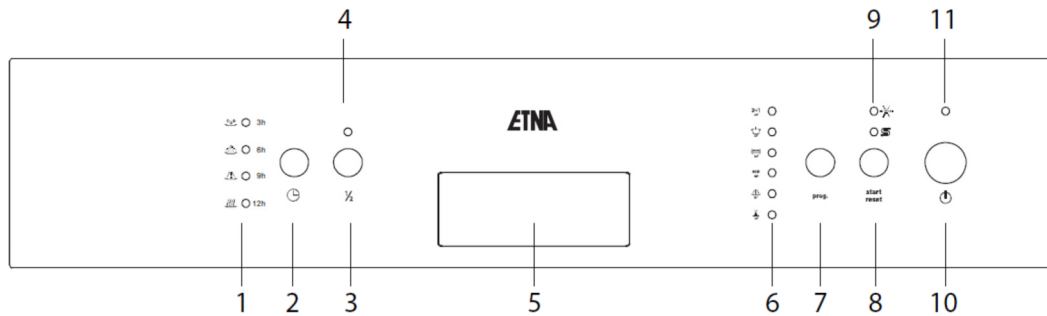


## Controle Panel

1. Control light postponed start
2. Button postponed start
3. Button "half-filled"
4. Control light "half-filled"
5. Handle
6. Control light "selected Program"
7. Program Button
8. Start / Reset Button
9. Alerting light "salt"
10. On / Off Button
11. Control light on / off

## Manual

1. Open the door and fill the detergent dispenser in the large compartment. Don't use hand soap!
2. Load the dishwasher. Make sure the crockery does not obstruct the rotating arms
3. Close the dishwasher door.
4. Set the dishwasher on (Nr. 10)
5. Select a programme (Nr. 7)
6. Press the Start button (Nr. 8)
7. The dishwasher starts with pumping off the water. It will take at least 10 seconds before it starts the program.
8. At the end of the programme the lights on the dishwasher will turn off. Now you can unload the appliance.