




## Dishwasher

- ✓ Open the door and fill the detergent dispenser in the large compartment. Don't use hand soap!
- ✓ Load the dishwasher. Make sure the crockery does not obstruct the rotating arms
- ✓ Close the dishwasher door.
- ✓ Select a programme and press the Start button
- ✓ At the end of the programme the lights on the dishwasher will turn off. Now you can unload the appliance.

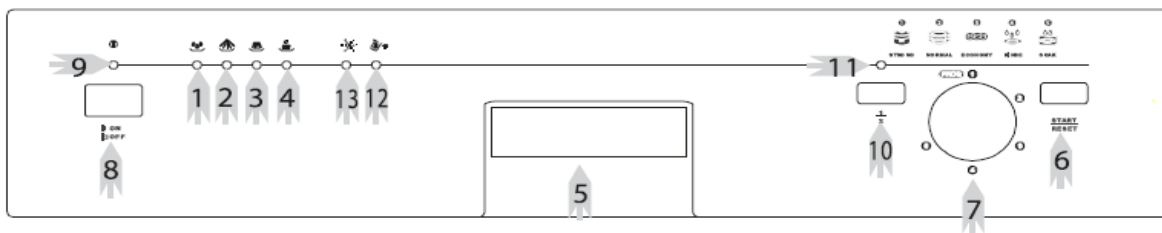


## Controle Panel

1. Control light pre-purge
2. Control light wash-program
3. Control light rinse
4. Control light drying
5. Handle
6. Start / Pause button
7. Program button
8. On / Off button
9. Control light On / Off
10. Button "half-filled"
11. Control light "half-filled"
12. Alerting light "salt"
13. Alerting light "brightener"