

Microwave Oven

The safety regulations:

- ✓ Never close lids on jars and boxes completely.
- ✓ Eggs in a Cup can't be heated in the oven
- ✓ Food with a shell must be pierced first before heated
- ✓ Never use the machine on microwave when its empty
- ✓ Never use any metal in the microwave, this can give sparks and will damage the machine.

Controle Panel

1. Display
2. Functions button
3. Control dial
4. Turn knob for time and weight
5. Kitchen timer / timer button
6. Stop button / security button
7. Start button / confirm button
8. Door release

Control microwave function

1. Press once on the function button. 'P100' flashes in the display. Press again (a number of times) on the function button if you wish to set another power.
2. Press the start button, the selected power is now confirmed.
3. Turn the control dial to set the time.
4. Press the start button again.

Control oven function

1. Press once on the function button. 'P100' flashes in the display. Press again (a number of times) on the function button to set a temperature. The first temperature that appears in the display is '140'. You can set a temperature from 140 °C to 230 °C.
2. Press the start button, the selected temperature is now confirmed.
3. Press start button again to start pre-heat.
4. After pre-heating place the dish in the microwave.
5. Turn the control dial to set the time.
6. Press the start button again.

