



Microwave / Oven

The safety regulations:

- ✓ Never close lids on jars and boxes completely.
- ✓ Eggs in a Cup can't be heated in the oven
- ✓ Food with a shell must be pierced first before heated
- ✓ Never use the machine on microwave when its empty
- ✓ Never use any metal in the microwave, this can give sparks and will damage the machine.



Controle Panel

1. Display
2. Function buttons (Micro/Grill/Oven/Micro+Grill)
3. Clock
4. Button automatic cooking
5. Button automatic programs
6. Button stay on temperature
7. Button automatic defrost
8. Button automatic grill
9. Memory button
10. Program / power / time button
11. Start button
12. Stop button
13. Open door

Microwave function

1. Press the micro button (most left of the function buttons).
2. Turn the program/power/ time button (10) to get the right power.
3. Press start to confirm the power.
4. Turn the program/power/time button (10) to set the time.
5. Press start again.

Oven function

1. Press the oven button (third function button from the left).
2. Turn the program/power/time button (10) to set the temperature.
3. Press start to confirm the temperature.
4. Turn the program/power/time button (10) to set the time.
5. Press start again.

