

## Microwave Oven

The safety regulations:

- ✓ Never close lids on jars and boxes completely.
- ✓ Eggs in a Cup can't be heated in the oven
- ✓ Food with a shell must be pierced first before heated
- ✓ Never use the machine on microwave when its empty
- ✓ Never use any metal in the microwave, this can give sparks and will damage the machine.

## Control Panel

1. Display
2. Reproduction of Functions
3. Time
4. Button automatic Programs
5. Button automatic defrost
6. More / less button
7. Timer button
8. Microwave power
9. Oven temperature
10. Grill
11. Slow cooking
12. Cooking with double function
13. Fast start Button
14. Delete / Stop button
15. Start button
16. Turn knob for time and weight

### Control microwave function

1. Press Microwave power (nr. 8).
2. Press Microwave power again to set the right power.
3. Turn the knob (nr 16) to set the time.
4. Press start.

### Control oven function

1. Press Oven temperature (nr. 9).
2. Press Oven temperature again to set the right temperature.
3. Press Start to preheat the oven.
4. After preheat, again set the temperature and give in the time via the turn knob.
5. Press Start.

