


Microwave

The safety regulations:

- ✓ Never close lids on jars and boxes completely.
- ✓ Eggs in a Cup can't be heated in the oven
- ✓ Food with a shell must be pierced first before heated
- ✓ Never use the machine on microwave when its empty
- ✓ Never use any metal in the microwave, this can give sparks and will damage the machine.

Controle Panel

1. Function knob
2. Power / weight button
3. Quickly preheating button
4. On / Off button
5. Temperature / automenu button
6. Clock button
7. Start / pause button
8. Childlock
9. Selection Knob

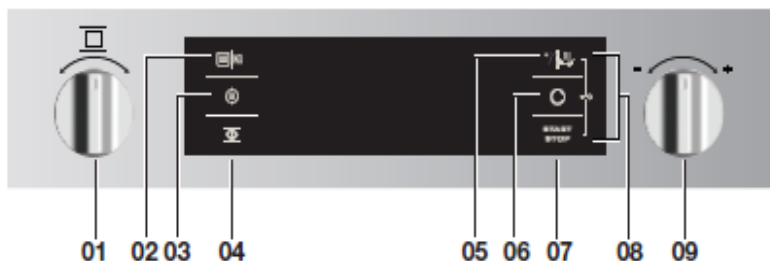

Microwave function

1. Press the **on/off button** to activate the microwave function. '01:00' is blinking in the display and the microwave icon appears in the display.
2. Turn the **selection button** to set the cooking time.
3. Press the **power / weight button** to adjust the microwave power. '900' is blinking in the display.
4. Turn the **selection button** to set the microwave power (between 100W and 900W). Press the **power / weight button** again to confirm the setting.
5. Press the **start / pause button** to start the cooking process.

Oven function

1. Press the **on/off button** to activate the microwave function. Turn the function knob one position to the right. The hot air icon is blinking.
2. Turn the selection knob to the right to choose a mode (hot air, grill with fan, hot air with bottom heat, grill).
3. To adjust
Druk op de **temperatuur- / automenu-toets** en draai aan de selectieknop om de gewenste temperatuur in te geven. Druk ter bevestiging nogmaals de **temperatuur- / automenu-toets** in.
4. Druk vervolgens op de **kloktoets** en draai dan aan de **selectieknop** om de tijd in te geven. Druk ter bevestiging nogmaals de **kloktoets**.
5. Druk op de **start- / pauze toets** om het kookproces te starten.