


## Microwave / Oven

The safety regulations:

- ✓ Never close lids on jars and boxes completely.
- ✓ Eggs in a Cup can't be heated in the oven
- ✓ Food with a shell must be pierced first before heated
- ✓ Never use the machine on microwave when its empty
- ✓ Never use any metal in the microwave, this can give sparks and will damage the machine.

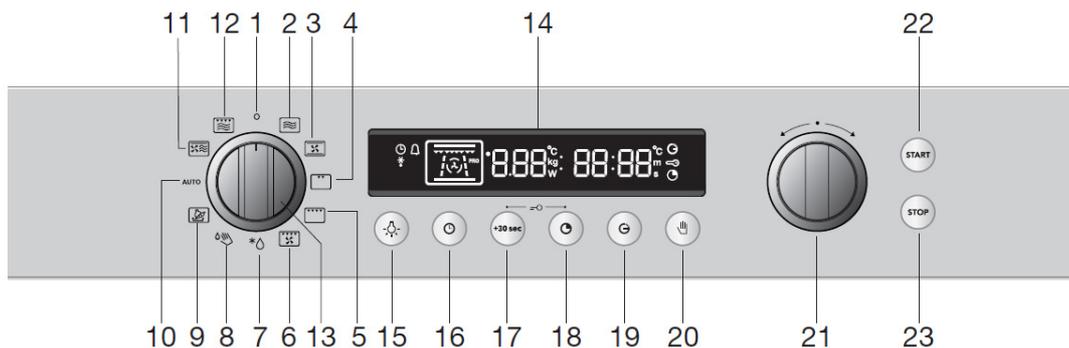

## Controle Panel

- |                                   |   |                                  |
|-----------------------------------|---|----------------------------------|
| 1. Off setting                    | 9. Vegetable menu setting                   | 16. Clock button                 |
| 2. Microwave setting              | 10. Automatic preparation                   | 17. +30 sec button (quick start) |
| 3. Oven function 'hot air'        | 11. Combi function 'microwave with hot air' | 18. Preparation time button      |
| 4. Oven function 'grill'          | 12. Combi function 'microwave with grill'   | 19. End time button              |
| 5. Oven function 'large grill'    | 13. Setting selector knob                   | 20. Select button                |
| 6. Oven function 'grill with fan' | 14. Display                                 | 21. Function selector knob       |
| 7. Defrost setting                | 15. Oven light button                       | 22. Start button                 |
| 8. Aqua clean function            |   | 23. Stop / cancel button         |

### Microwave function

1. Turn the **setting selector knob** to the microwave setting (one position to the right). The display shows the time and power.
2. Turn the **function selector knob** to set the preparation time you want. If you do not want to change the power, press **start** to start the preparation.
3. If you want to change the power, press **select** and turn the **function knob** to the level you want.
4. Press **start** to start the preparation.

### Oven function

1. Turn the **setting selector knob** to the desired oven function (two positions to the right is the hot air function).
2. If you want to change the temperature, press **select** and turn the **function selector knob** to the temperature you want.
3. If you want to change the preparation time, press **preparation time** and turn the **function selector knob** to the preparation time you want.
4. Press **start**.